

# **Geostationary Operational Environmental Satellite (GOES) GOES-R Series**

## **GOES-R Reliable Data Delivery Protocol (GRDDP)**

**January 16, 2008**



National Aeronautics and  
Space Administration

Goddard Space Flight Center  
Greenbelt, Maryland

## **/Systems Engineering**

### **GRDDP**

417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)

Version: 2.1 (1\_23\_08)

Printed by: dharrison

Printed on: Wednesday, January 23, 2008

No filter applied.

No sort applied.

## Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Scope	1
<b>2</b>	<b>Reference Document</b>	<b>2</b>
<b>3</b>	<b>Definitions</b>	<b>3</b>
<b>4</b>	<b>Overall Functional Description</b>	<b>4</b>
4.1	Multiplexed Logical Channels	4
4.1.1	Channel Independence	4
4.1.2	Transmit Priority	4
4.1.3	Data Transmit Queue	4
4.1.4	Urgent Message Transmit Queue	4
4.2	Reliable Delivery	4
4.2.1	Error Detection	4
4.2.2	Packet Sequence Numbers	4
4.2.3	Sequence Number Use	4
4.2.4	Acknowledgement and Retransmit	5
4.2.5	Retransmission	5
<b>5</b>	<b>Packet Format</b>	<b>6</b>
5.1	Header	6
5.1.1	Destination Address	6
5.1.2	Protocol ID	6
5.1.3	Source Address	6
5.1.4	Packet Control	6
5.1.4.1	User Defined Bits	6
5.1.4.2	Packet Type	6
5.1.5	Application Payload Length MSB	7
5.1.6	Application Payload Length LSB	7
5.1.7	Channel Number	7
5.1.8	Sequence Number	7
5.2	Application Payload	7
5.2.1	Data Packets and Urgent Messages	7
5.2.2	Acknowledge and Reset Packets	7
5.3	Trailer	7
5.3.1	CRC Preset	8
<b>6</b>	<b>Transport Channel Definition</b>	<b>9</b>

6.1	TEP Parameters	9
6.2	TEP States	9
<b>7</b>	<b>Channel Operations</b>	<b>10</b>
7.1	Logical Connections	10
7.2	Reset Command	10
7.2.1	Reset Timer Cancellation	10
7.2.2	Reset Timer Expiration	10
7.3	Transport Channel Connection	10
7.4	Receive TEP Operations	10
7.4.1	Sliding Window	10
7.4.2	Sliding Window Range	10
7.4.3	Window Advance	10
7.4.4	Packet Acknowledgement	10
7.4.5	Packets with Errors	10
7.4.6	Out of Window Sequence Number	11
7.4.7	Duplicate Sequence Number	11
7.4.8	Urgent Message Acknowledgement	11
7.4.9	Urgent Message Delivery Order	11
7.4.10	Urgent Message Delivery Priority	11
7.4.11	Reset Command Sequence Number	11
7.4.12	Reset Command Processing	11
7.4.13	Packets Pending Delivery	11
7.4.14	Reset Command Report	11
7.5	Transmit TEP Operations	11
7.5.1	Transmit TEP ACKs	11
7.5.2	Transmit TEP Sequence Number Allocation	11
7.5.3	Reset Command Sequence Number	11
7.5.4	Transmit Window	12
7.5.5	Unacknowledged Packets	12
7.5.6	Transmit Window Start	12
7.5.7	Transmit Window Advance	12
7.5.8	Packet Retransmit	12
7.5.9	Retry Reset	12
7.5.10	Timeout Start	12
7.5.11	Urgent Message Transmission	12
<b>8</b>	<b>Acronyms</b>	<b>13</b>

<b>ID</b>	<b>Object Number</b>	<b>417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)</b>
GRDDP1	1	<b>1 Introduction</b>
GRDDP2	1.0-1	The GOES-R spacecraft uses European Cooperation for Space Standardization (ECSS) SpaceWire for the transfer of sensor, telemetry, and command data between instruments and the spacecraft. The GOES-R Program has directed that all data transferred over SpaceWire implement a reliable data delivery protocol. The SpaceWire Standard does not specify a protocol for reliable data delivery. It is the purpose of this document to specify a reliable data delivery protocol for the GOES-R spacecraft and instruments.
GRDDP3	1.1	<b>1.1 Scope</b>
GRDDP4	1.1.0-1	The Reliable Data Delivery Protocol uses the lower level SpaceWire data link layer to provide reliable packet delivery services to one or more higher level host application processes.
GRDDP6	1.1.0-2	This document specifies the functional requirements for the Reliable Data Delivery Protocol service. This document does not specify the interfaces to the lower or higher level processes, which may be implementation dependent.

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)
----	------------------	---

GRDDP7	2	<b>2 Reference Document</b>
--------	---	-----------------------------

GRDDP8	2.0-1	The lower layer protocol definitions for the GOES-R instrument to spacecraft data bus are compliant with EUROPEAN COOPERATION FOR SPACE STANDARDIZATION SpaceWire - Links, Nodes, Routers and Networks ECSS-E-50-12A, 24 January 2003.
--------	-------	--

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)
----	---------------	--

GRDDP9	3	<b>3 Definitions</b>
--------	---	----------------------

GRDDP10	3.0-1	<b>Transmitter:</b> An electronic circuit that transmits signals over a physical medium.
---------	-------	--

**Receiver:** An electronic circuit that receives signals over a physical medium.

**SpaceWire Port:** SpaceWire transmitter and receiver circuits and associated logic that implements the SpaceWire Exchange level protocol including link initialization, character flow control, and link error detection and recovery.

**SpaceWire Link:** A bidirectional point-to-point connection between two SpaceWire ports.

**Transport End Point:** A Transport End Point (TEP) is defined on a host system for the purpose of either transmitting or receiving application packets over a SpaceWire Link. Multiple TEPs can be defined for any host system, but each TEP can only transmit or receive not both.

**Transport Channel:** A protocol defined data path between two TEPs. A Transport Channel can exist only between one transmit TEP and one receive TEP. Each Transport Channel is a one-way data path for application packets. The protocol supports multiple concurrent Transport Channels over a SpaceWire Link.

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)
GRDDP11	4	<b>4 Overall Functional Description</b>
GRDDP12	4.0-1	<p>This protocol describes the mechanism for reliable transfer of data packets over a SpaceWire connection (providing services through the exchange and packet layers). This protocol adds the following capabilities to a SpaceWire link:</p> <ol style="list-style-type: none"><li>Multiplexed Logical Connections</li><li>Reliable Delivery</li><li>Missing packet detection</li><li>Out of sequence packet reordering</li></ol>
GRDDP13	4.1	<b>4.1 Multiplexed Logical Channels</b>
GRDDP14	4.1.0-1	The protocol <b>shall</b> support multiple simultaneous logical connections over a single SpaceWire link.
GRDDP15	4.1.1	<b>4.1.1 Channel Independence</b>
GRDDP16	4.1.1.0-1	Each Transport channel <b>shall</b> operate independently from other transport channels.
GRDDP17	4.1.2	<b>4.1.2 Transmit Priority</b>
GRDDP18	4.1.2.0-1	When more than one packet is available for transmit, all Acknowledge packets <b>shall</b> be transmitted first, then Reset Command packets, then Urgent Message packets, then Retransmit packets, then Data packets.
GRDDP19	4.1.3	<b>4.1.3 Data Transmit Queue</b>
GRDDP20	4.1.3.0-1	When data packets from more than one channel are available for transmit, packets <b>shall</b> be transmitted in the order in which they are queued.
GRDDP21	4.1.4	<b>4.1.4 Urgent Message Transmit Queue</b>
GRDDP22	4.1.4.0-1	When Urgent Message packets from more than one channel are available for transmit, packets <b>shall</b> be transmitted in the order in which they are queued.
GRDDP23	4.2	<b>4.2 Reliable Delivery</b>
GRDDP24	4.2.0-1	The Reliable Delivery protocol detects lost packets, duplicate packets, out of sequence packets, and provides damaged data recovery. The protocol provides additional error detection beyond the SpaceWire physical layer utilizing CRCs, packet sequence numbers, positive acknowledgement, and timeouts to detect lost or duplicated Data packets.
GRDDP25	4.2.1	<b>4.2.1 Error Detection</b>
GRDDP26	4.2.1.0-1	Packet errors <b>shall</b> be detected by adding a Cyclic Redundancy Check (CRC) to each packet transmitted, checking it at the receiver, and discarding any erroneous packet.
GRDDP27	4.2.2	<b>4.2.2 Packet Sequence Numbers</b>
GRDDP28	4.2.2.0-1	An 8 bit sequence number <b>shall</b> be assigned to each packet transmitted.
GRDDP29	4.2.3	<b>4.2.3 Sequence Number Use</b>
GRDDP30	4.2.3.0-1	At the receiver the sequence numbers <b>shall</b> be used to detect lost Data, duplicate packets and to correctly order packets.




<b>ID</b>	<b>Object Number</b>	<b>417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)</b>
GRDDP31	4.2.4	<b>4.2.4 Acknowledgement and Retransmit</b>
GRDDP32	4.2.4.0-1	The receiver <b>shall</b> send a positive acknowledgment (ACK) for each data packet received without error.
GRDDP33	4.2.5	<b>4.2.5 Retransmission</b>
GRDDP34	4.2.5.0-1	If the ACK is not received within a defined channel-specific timeout interval the data <b>shall</b> be retransmitted as defined in GRDDP120 [7.5].

## 417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)

### GRDDP35 5 **5 Packet Format**

GRDDP36 5.0-1 All protocol packets include an 8-byte header, followed by a variable length payload, followed by a 1-byte CRC. The figure below shows how the protocol packet is encapsulated within the standard SpaceWire packet. Note that while a SpaceWire packet may have zero or more destination addresses before the payload, the Reliable Delivery Protocol requires that exactly one destination address is delivered to the protocol logic. (*CCR 01100*)

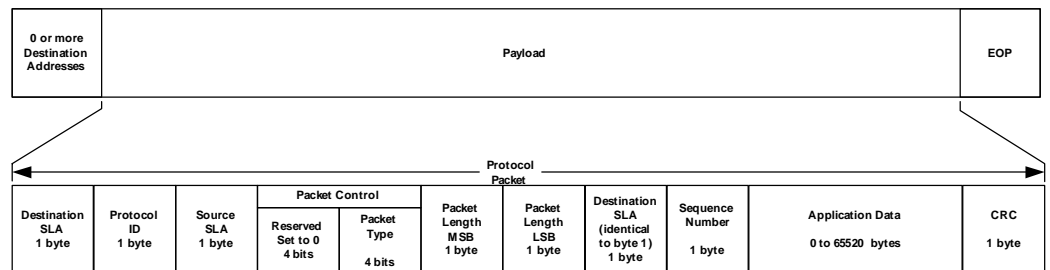

A GRDDP Packet within a SpaceWire Packet Figure

(*CCR 00354*)

(*CCR 01100*)

### GRDDP37 5.1 **5.1 Header**

#### GRDDP38 5.1.1 **5.1.1 Destination Address**

GRDDP39 5.1.1.0-1 The first byte of the header **shall** contain the Destination Address which is an SLA that identifies the destination TEP to which the packet is being sent. (*CCR 01100*)

#### GRDDP40 5.1.2 **5.1.2 Protocol ID**

GRDDP41 5.1.2.0-1 The second byte of the header **shall** be decimal 238 as assigned by the ECSS. (*CCR 00354*)

#### GRDDP42 5.1.3 **5.1.3 Source Address**

GRDDP43 5.1.3.0-1 The third byte of the header **shall** be the Source Address SLA that identifies the node from which the packet was sent. (*CCR 01100*)

#### GRDDP44 5.1.4 **5.1.4 Packet Control**

GRDDP45 5.1.4.0-1 The fourth byte of the header **shall** contain packet control data.

##### GRDDP46 5.1.4.1 **5.1.4.1 User Defined Bits**

GRDDP47 5.1.4.1.0-1 The most significant nibble of the Packet Control byte **shall** be set to all zeros unless a program using this protocol defines them, in a program specific document, for purposes beyond the scope of this document.

Note: For example, a program may define these bits as a sub-PID to identify the payload data to a higher level process.

##### GRDDP49 5.1.4.2 **5.1.4.2 Packet Type**

GRDDP50 5.1.4.2.0-1 The least significant nibble of the Packet Control byte **shall** identify packet type as listed in the Packet Type Values Table below.

**ID                      Object Number                      417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)**

GRDDP50    5.1.4.2.0-1

**Packet Type Values Table**

Packet Type	Value
Application Data	0
Acknowledge	1
Reset Command	2
Urgent Message Data	3
Reserved	4 to 15

*(CCR 01100)*

GRDDP160    5.1.4.2.0-2

The most significant nibble of the Packet Control byte is reserved and shall be set to 0. *(CCR 01100)*

GRDDP51    5.1.5

**5.1.5 Application Payload Length MSB**

GRDDP52    5.1.5.0-1

The fifth header byte **shall** contain the most significant byte of the Application Payload byte length field.

GRDDP53    5.1.6

**5.1.6 Application Payload Length LSB**

GRDDP54    5.1.6.0-1

The sixth header byte **shall** contain the least significant byte of the Application Payload byte length field.

GRDDP55    5.1.7

**5.1.7 Channel Number**

GRDDP56    5.1.7.0-1

The seventh header byte **shall** contain the Destination SLA and have the same value as header byte 1. *(CCR 01100)*

GRDDP57    5.1.8

**5.1.8 Sequence Number**

GRDDP58    5.1.8.0-1

The eighth byte of the header **shall** be a sequence number in the range 0 through 255. It is recommended that the sequence number range be twice the window size. *(CCR 00354) (CCR 01100)*

GRDDP59    5.2

**5.2 Application Payload**

GRDDP60    5.2.1

**5.2.1 Data Packets and Urgent Messages**

GRDDP61    5.2.1.0-1

The protocol Data packets and Urgent Message Packets **shall** contain an Application Payload field containing 1 to 65520 (inclusive) bytes of content for delivery to the Application Level client associated with the channel's Receive TEP.

GRDDP62    5.2.2

**5.2.2 Acknowledge and Reset Packets**

GRDDP63    5.2.2.0-1

Protocol packets that are an Acknowledge or Reset Command **shall** contain a zero length Application Payload field.

GRDDP64    5.3

**5.3 Trailer**

GRDDP65    5.3.0-1

The protocol packet trailer **shall** be an 8 bit Asynchronous Transfer Code (ATM) Cyclic Redundancy Check (CRC) computed from the transport header destination SLA to the last payload byte, defined in the following polynomial:

CRC8, ATM (HEC)

$$x^8 + x^2 + x + 1$$

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)
GRDDP66	5.3.1	<b>5.3.1 CRC Preset</b>
GRDDP67	5.3.1.0-1	Prior to computing each packet's CRC, the initial value for the computation <b>shall</b> be set to all 1s.

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)												
GRDDP68	6	<b>6 Transport Channel Definition</b>												
GRDDP69	6.0-1	The set of available Transport Channels for each host system <b>shall</b> be pre-defined in protocol configuration tables.												
GRDDP70	6.1	<b>6.1 TEP Parameters</b>												
GRDDP71	6.1.0-1	Each TEP <b>shall</b> be defined with the following parameters: <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 20px;"><b>Local SLA</b></td> <td>The SLA assigned to the TEP for each channel.</td> </tr> <tr> <td><b>Remote SLA</b></td> <td>The SLA assigned to the TEP which is connected to the Local TEP.</td> </tr> <tr> <td><b>TEP Type</b></td> <td>Identifies the TEP as transmit or receive.</td> </tr> <tr> <td><b>Window Size</b></td> <td>The size of the channel's sequence number Window. The Window size must be a power of 2.</td> </tr> <tr> <td><b>Time Out</b></td> <td>Transmit TEPs only. The time to wait to receive an acknowledge before retransmitting a data packet.</td> </tr> <tr> <td><b>Maximum Retries</b></td> <td>Transmit TEPs only. The number of retry attempts allowed before declaring a channel failure.</td> </tr> </table> <p style="margin-left: 20px;"><i>(CCR 01100)</i></p>	<b>Local SLA</b>	The SLA assigned to the TEP for each channel.	<b>Remote SLA</b>	The SLA assigned to the TEP which is connected to the Local TEP.	<b>TEP Type</b>	Identifies the TEP as transmit or receive.	<b>Window Size</b>	The size of the channel's sequence number Window. The Window size must be a power of 2.	<b>Time Out</b>	Transmit TEPs only. The time to wait to receive an acknowledge before retransmitting a data packet.	<b>Maximum Retries</b>	Transmit TEPs only. The number of retry attempts allowed before declaring a channel failure.
<b>Local SLA</b>	The SLA assigned to the TEP for each channel.													
<b>Remote SLA</b>	The SLA assigned to the TEP which is connected to the Local TEP.													
<b>TEP Type</b>	Identifies the TEP as transmit or receive.													
<b>Window Size</b>	The size of the channel's sequence number Window. The Window size must be a power of 2.													
<b>Time Out</b>	Transmit TEPs only. The time to wait to receive an acknowledge before retransmitting a data packet.													
<b>Maximum Retries</b>	Transmit TEPs only. The number of retry attempts allowed before declaring a channel failure.													
GRDDP72	6.2	<b>6.2 TEP States</b>												
GRDDP73	6.2.0-1	Each TEP <b>shall</b> be in one of three possible operating states: <table border="0" style="margin-left: 20px;"> <tr> <td style="padding-right: 20px;"><b>Closed</b></td> <td>The TEP does not generate any packets on the link and does not respond to any packets received.</td> </tr> <tr> <td><b>Enabled</b></td> <td>A TEP transitions to the "Enabled" state when the host has requested it to be opened, and provided appropriate I/O buffer information. In addition, a Transmit TEP sends a reset command on this transition.</td> </tr> <tr> <td><b>Open</b></td> <td>A Receive TEP transitions from Enabled to Open when a Reset command has been received from the remote Transmit channel. A Transmit TEP transitions from Enabled to Open when it receives an ACK for a Reset command that it has sent to the remote Receive TEP.</td> </tr> </table>	<b>Closed</b>	The TEP does not generate any packets on the link and does not respond to any packets received.	<b>Enabled</b>	A TEP transitions to the "Enabled" state when the host has requested it to be opened, and provided appropriate I/O buffer information. In addition, a Transmit TEP sends a reset command on this transition.	<b>Open</b>	A Receive TEP transitions from Enabled to Open when a Reset command has been received from the remote Transmit channel. A Transmit TEP transitions from Enabled to Open when it receives an ACK for a Reset command that it has sent to the remote Receive TEP.						
<b>Closed</b>	The TEP does not generate any packets on the link and does not respond to any packets received.													
<b>Enabled</b>	A TEP transitions to the "Enabled" state when the host has requested it to be opened, and provided appropriate I/O buffer information. In addition, a Transmit TEP sends a reset command on this transition.													
<b>Open</b>	A Receive TEP transitions from Enabled to Open when a Reset command has been received from the remote Transmit channel. A Transmit TEP transitions from Enabled to Open when it receives an ACK for a Reset command that it has sent to the remote Receive TEP.													

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)
GRDDP74	7	<b>7 Channel Operations</b>
GRDDP75	7.1	<b>7.1 Logical Connections</b>
GRDDP76	7.1.0-1	Upon power up initialization all TEPs <b>shall</b> be in the Closed state.
GRDDP77	7.2	<b>7.2 Reset Command</b>
GRDDP78	7.2.0-1	When a Transmit TEP transitions to the Enabled state, it <b>shall</b> send a Reset command to its remote Receive TEP and initiate an acknowledgement timer.
GRDDP79	7.2.1	<b>7.2.1 Reset Timer Cancellation</b>
GRDDP80	7.2.1.0-1	Upon receipt of a Reset acknowledgement, the transmit TEP <b>shall</b> cancel the acknowledgement timer.
GRDDP81	7.2.2	<b>7.2.2 Reset Timer Expiration</b>
GRDDP82	7.2.2.0-1	Upon expiration of the Reset timer period, the transmit TEP <b>shall</b> retransmit the Reset command.
GRDDP83	7.3	<b>7.3 Transport Channel Connection</b>
GRDDP84	7.3.0-1	A Transport Channel connection <b>shall</b> be considered established when a Transmit TEP and Receive TEP are both in the Open state.
GRDDP85	7.4	<b>7.4 Receive TEP Operations</b>
GRDDP159	7.4.0-1	A receive TEP does not send data packets, Urgent Messages, or Reset Commands. ( <i>CCR 01100</i> )
GRDDP92	7.4.1	<b>7.4.1 Sliding Window</b>
GRDDP93	7.4.1.0-1	The receive TEP <b>shall</b> maintain a sliding window which is a range of consecutive sequence numbers to determine whether each received data packet will be accepted or discarded.
GRDDP94	7.4.2	<b>7.4.2 Sliding Window Range</b>
GRDDP95	7.4.2.0-1	The receive window range <b>shall</b> start with the sequence number of the next data packet expected to be delivered and end with sequence number equal to the start plus Window Size minus 1.
GRDDP96	7.4.3	<b>7.4.3 Window Advance</b>
GRDDP97	7.4.3.0-1	The receive window <b>shall</b> be advanced by 1 upon receipt of a packet containing the next expected sequence number.
		Note: If packets with successively adjacent sequence numbers have already been received out of order, the start of the receive window will be advanced by more than 1, plus the number of successively adjacent “early” packets.
GRDDP98	7.4.4	<b>7.4.4 Packet Acknowledgement</b>
GRDDP99	7.4.4.0-1	All Data and Reset Command packets received without error <b>shall</b> be acknowledged.
GRDDP100	7.4.5	<b>7.4.5 Packets with Errors</b>

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)
GRDDP101	7.4.5.0-1	Any packet received with detectable errors <b>shall</b> be discarded and not acknowledged.
GRDDP102	7.4.6	<b>7.4.6 Out of Window Sequence Number</b>
GRDDP103	7.4.6.0-1	A data packet that is received with a sequence number that is not within the receive window <b>shall</b> be acknowledged, but discarded.
GRDDP104	7.4.7	<b>7.4.7 Duplicate Sequence Number</b>
GRDDP105	7.4.7.0-1	A data packet received with a sequence number within the receive window that is a duplicate of a packet pending delivery to the host <b>shall</b> be acknowledged, but discarded.
GRDDP106	7.4.8	<b>7.4.8 Urgent Message Acknowledgement</b>
GRDDP107	7.4.8.0-1	Urgent Message packets <b>shall</b> not be acknowledged.
GRDDP108	7.4.9	<b>7.4.9 Urgent Message Delivery Order</b>
GRDDP109	7.4.9.0-1	Urgent Message packets <b>shall</b> be delivered to the host in the order received. ( <i>CCR 01100</i> )
GRDDP158	7.4.9.0-2	The Urgent Message sequence number shall be set to 0. ( <i>CCR 01100</i> )
GRDDP110	7.4.10	<b>7.4.10 Urgent Message Delivery Priority</b>
GRDDP111	7.4.10.0-1	Urgent Message packets <b>shall</b> be delivered to the host before any Data Packets pending delivery.
GRDDP112	7.4.11	<b>7.4.11 Reset Command Sequence Number</b>
GRDDP113	7.4.11.0-1	A Reset command that does not have a sequence number of zero <b>shall</b> be treated as an error packet.
GRDDP114	7.4.12	<b>7.4.12 Reset Command Processing</b>
GRDDP115	7.4.12.0-1	When a Reset command is received, the receive window start <b>shall</b> be set to 1.
GRDDP116	7.4.13	<b>7.4.13 Packets Pending Delivery</b>
GRDDP117	7.4.13.0-1	When a Reset command is received all packets pending delivery to the host <b>shall</b> be discarded.
GRDDP118	7.4.14	<b>7.4.14 Reset Command Report</b>
GRDDP119	7.4.14.0-1	Receipt of a reset command <b>shall</b> be reported to the host.
GRDDP120	7.5	<b>7.5 Transmit TEP Operations</b>
GRDDP121	7.5.1	<b>7.5.1 Transmit TEP ACKs</b>
GRDDP122	7.5.1.0-1	A transmit TEP <b>shall</b> not send an ACK packet.
GRDDP123	7.5.2	<b>7.5.2 Transmit TEP Sequence Number Allocation</b>
GRDDP124	7.5.2.0-1	Each data packet transmitted <b>shall</b> have a sequence number allocated from the TEP's transmit window range of available sequence numbers.
GRDDP125	7.5.3	<b>7.5.3 Reset Command Sequence Number</b>
GRDDP126	7.5.3.0-1	All Reset commands <b>shall</b> be transmitted with a sequence number zero.

ID	Object Number	417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol (GRDDP)
GRDDP127	7.5.4	<b>7.5.4 Transmit Window</b>
GRDDP128	7.5.4.0-1	A transmit TEP <b>shall</b> maintain a sliding window range of consecutive sequence numbers that are available for transmitting data packets.
GRDDP129	7.5.5	<b>7.5.5 Unacknowledged Packets</b>
GRDDP130	7.5.5.0-1	The transmit window <b>shall</b> limit the number of unacknowledged data packets that can be transmitted.
GRDDP131	7.5.6	<b>7.5.6 Transmit Window Start</b>
GRDDP132	7.5.6.0-1	The transmit window start <b>shall</b> be set to 1 when an ACK is received for a Reset command.
GRDDP133	7.5.7	<b>7.5.7 Transmit Window Advance</b>
GRDDP134	7.5.7.0-1	The transmit window start <b>shall</b> be advanced by 1 when the ACK is received for the first sequence number in the transmit window. ( <i>CCR 01100</i> )
GRDDP136	7.5.8	<b>7.5.8 Packet Retransmit</b>
GRDDP137	7.5.8.0-1	A transmitted data packet that is not acknowledged within a channel specific timeout interval <b>shall</b> be retransmitted with the original sequence number up to a channel specific number of times. ( <i>CCR 01100</i> )
GRDDP138	7.5.9	<b>7.5.9 Retry Reset</b>
GRDDP139	7.5.9.0-1	When a channel specific number of retry attempts have been exceeded the channel <b>shall</b> be reset.
GRDDP140	7.5.10	<b>7.5.10 Timeout Start</b>
GRDDP141	7.5.10.0-1	The timeout interval <b>shall</b> begin when the last byte of the Data Packet or Reset Command has been transmitted.
GRDDP152	7.5.11	<b>7.5.11 Urgent Message Transmission</b>
GRDDP153	7.5.11.0-1	Urgent Message Packets <b>shall</b> be sent immediately without being allocated a transmit window sequence number or starting an acknowledgement timer.  Note that Urgent Message Packets are sent once without retries or acknowledgements.



**ID**            **Object  
Number**

**417-R-RPT-0050, RM Version, GOES-R Reliable Data Delivery Protocol  
(GRDDP)**

GRDDP155    8

GRDDP157    8.0-1

## **8 Acronyms**

ACK	Acknowledgment
ATM	Asynchronous Transfer Mode
CRC	Cyclic Redundancy Check
ECSS	European Cooperation for Space Standardization
GOES	Geostationary Operational Environmental Satellite
GOES-R	Geostationary Operational Environmental Satellite -R Series
GRDDP	GOES-R Reliable Data Delivery Protocol
GSFC	Goddard Space Flight Center
HEC	Header Error Code
ID	Identification
NASA	National Aeronautics and Space Administration
SLA	SpaceWire Logical Address
TEP	Transport End Point

## 417-R-RPT-0050 DCR

**CCR #: 00106** Rev  
Contract #: all instruments  
CCB Status: **Approved**  
CCB Date: 7/8/2005  
Contract Mod#: see contract  
Doc Change Date: 7/1/2005

**Title: GOES-R Reliable Data Delivery Protocol**  
GOES S/C: R Effectivity: S/C & Instruments  
Doc #: 417-R-RPT-0050 Rev-A  
Doc Section All  
DOORS Version: N/A  
DOORS ID #: N/A

**CCR #: 00216** Rev  
Contract #: all instruments  
CCB Status: **Approved**  
CCB Date: 4/28/2006  
Contract Mod#: see contract  
Doc Change Date: 4/28/2006

**Title: GOES-R GRDDP Revision**  
GOES S/C: R Effectivity: SC & Instruments  
Doc #: 417-R-RPT-0050 Rev-B  
Doc Section All  
DOORS Version: N/A  
DOORS ID #:

**CCR #: 00354** Rev  
Contract #: all instruments  
CCB Status: **Approved**  
CCB Date: 1/30/2007  
Contract Mod#: see contract  
Doc Change Date: 1/30/2007

**Title: GRDDP Update**  
GOES S/C: R Effectivity: S/C & Instruments  
Doc #: 417-R-RPT-0050  
Doc Section: 1.1, 2, 5.1.2, 5.1.8, 7.5.11  
DOORS Version: 2.0  
DOORS ID #: N/A

**CCR #: 1100** Rev  
Contract #: all instruments  
CCB Status: **Approved**  
CCB Date: 1/16/2008  
Contract Mod#: see contract  
Doc Change Date: 1/16/2008

**Title: GRDDP V 2.0 Updates**  
GOES S/C: R Effectivity: S/C & Instruments  
Doc #: 417-R-RPT-0050  
Doc Section: 5.0, 5.1, 6.1, 7.4, 7.5, 8  
DOORS Version: 2.1  
DOORS ID #: GRDDP71 (6.1.0-1), GRDDP137 (7.5.8.0-1), GRDDP109 (7.4.9.0-1), GRDDP86 (7.4.1), GRDDP50 (5.1.4.2.0-1), GRDDP85 (7.4), GRDDP134 (7.5.7.0-1), GRDDP56 (5.1.7.0-1), GRDDP109 (7.4.9.0-1), GRDDP87 (7.4.1.0-1), GRDDP49 (5.1.4.2), GRDDP91 (7.4.3.0-1), GRDDP88 (7.4.2), GRDDP36 (5.0-1), GRDDP43 (5.1.3.0-1), GRDDP154 (8), GRDDP58 (5.1.8.0-1), GRDDP39 (5.1.1.0-1), GRDDP90 (7.4.3), GRDDP156 (8.0-1), GRDDP89 (7.4.2.0-1)